

A11 Smart Dimmer Switch Third party Matter App Access Operation Instructions

Note:


- As software evolves, the latest user interfaces may differ slightly from what is described in this instruction.
- The account must first add a HomePod, Google speaker or Alexa speaker that supports the Matter protocol. Check the FAQ for a specific list.
- Orvibo Dimmer Switch and the controller (normally it's the smart speakers of Alexa/Google/Apple) should be in the same LAN (local area network).
- The WiFi router should support or enable IPv6.
- If the indicator light flashes white slowly, you can add devices automatically. (If the indicator light does not flash white, press the button 2 times quickly, then press the button again until the indicator flashes slowly.)

Using Google Home App


- Open the camera App of Android;



- Scan the Matter QR Code on the product or user manual and tap "Tap to set up".

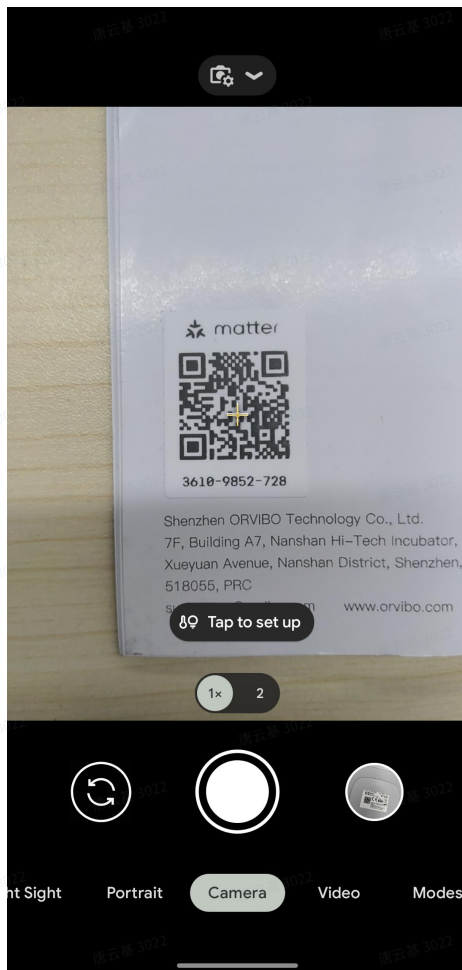

- Tap on Google Home in the App list.

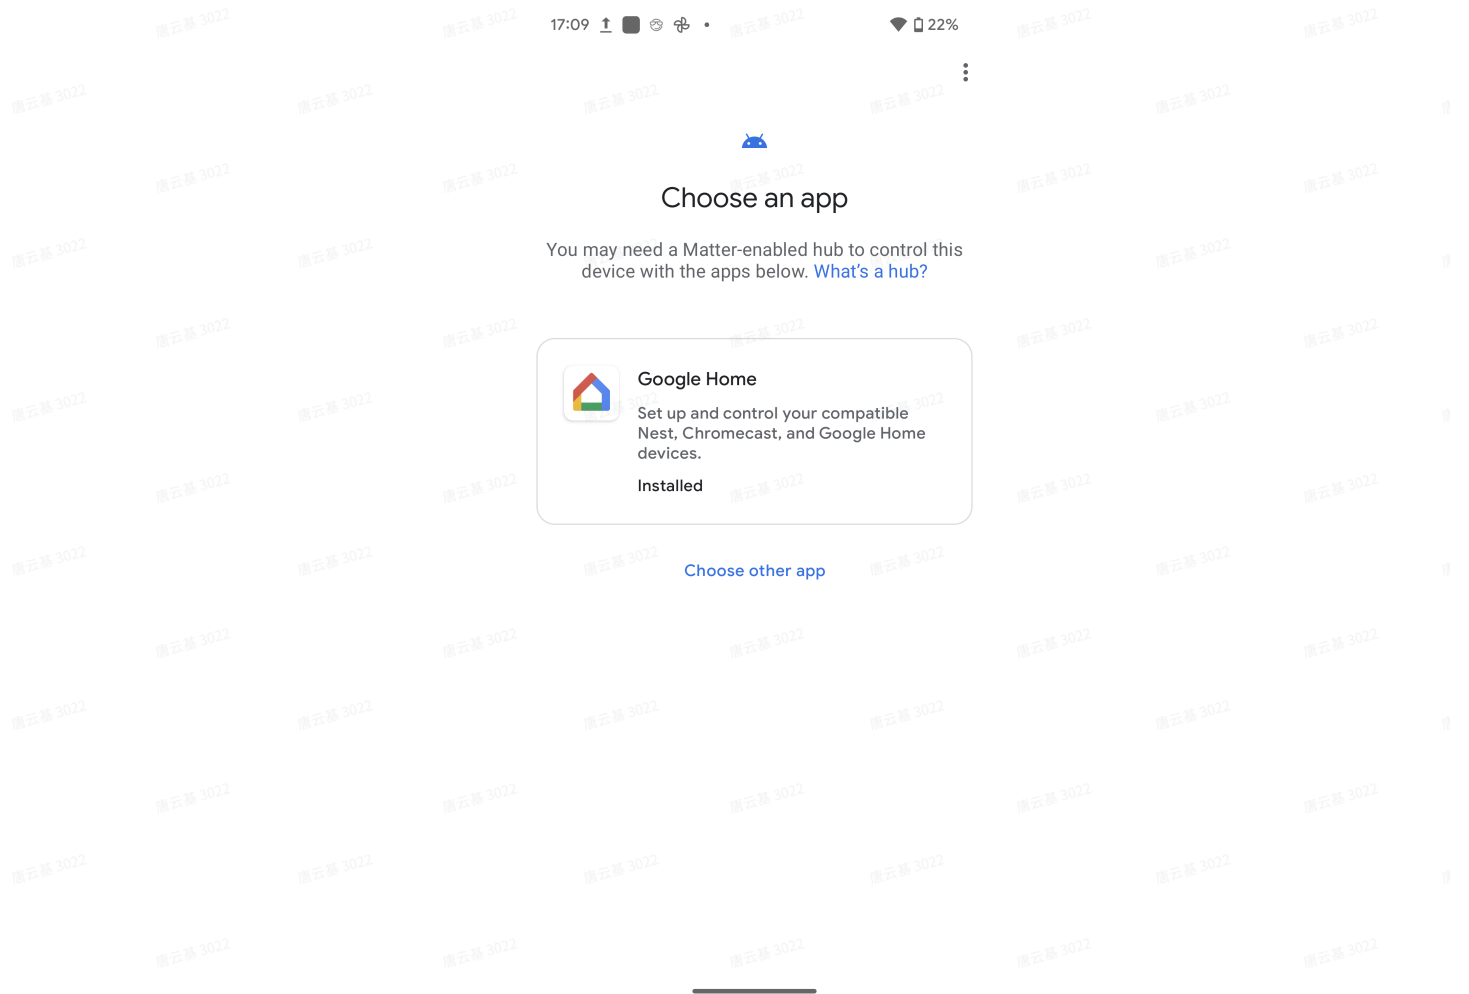

- Tap "I Agree" to add the product, then wait for the device to connect. Once added, tap "Done".



Connect this device to your Google Account

This lets you control your device with Google Assistant or the Google Home app.

To do this, Google securely shares your local network credentials (e.g. Wi-Fi) so the device can get online. The device shares information with Google, like its current state (on or off, for example).

Google may make firmware updates available when firmware updates are provided by your device manufacturer. For debugging and product improvement, Google may share aggregate device usage data and de-identified diagnostic data with the device manufacturer.

Information shared with Google will be processed in accordance with [Google's Privacy Policy](#). You can remove this connection anytime in Settings.

Cancel

Agree



Connecting to device...



Done




Device connected




Done

- Choose a location for the device then tap "Next". Then give the device a name and tap "Next".


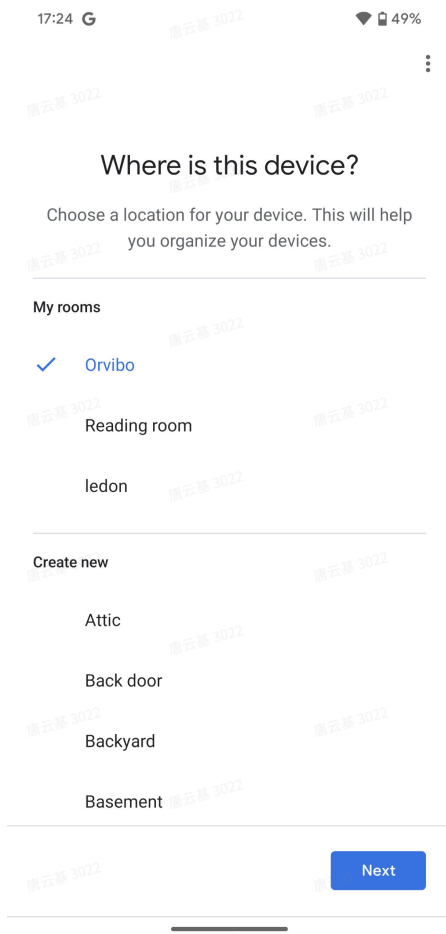


- Your Matter-Enabled device has been added.


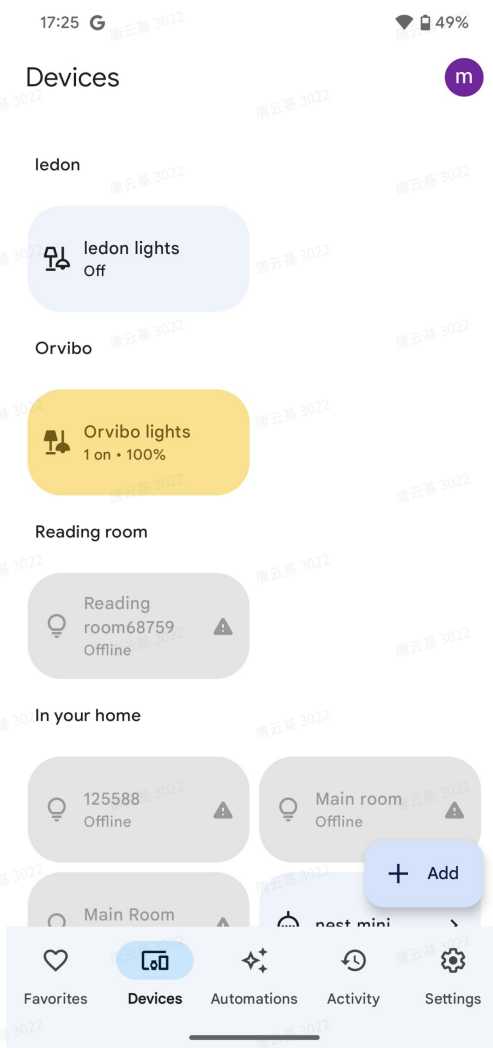


Using Alexa App.

- Open the Alexa App, and tap on "Dvices", then "+" and "Add Device".

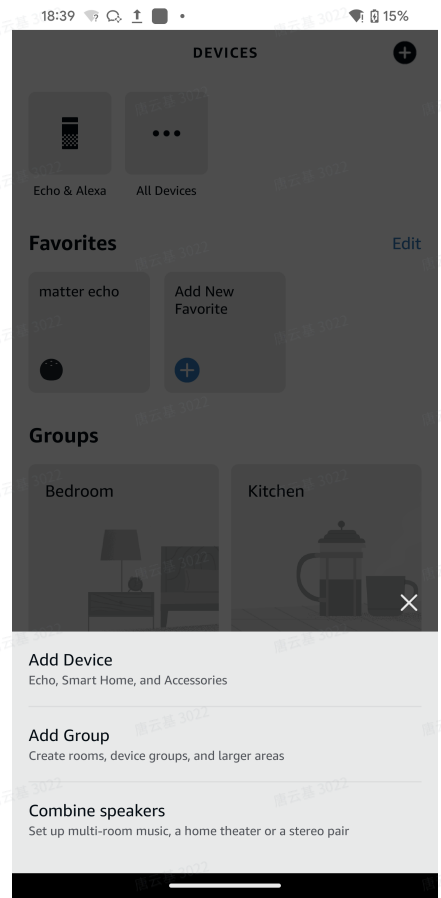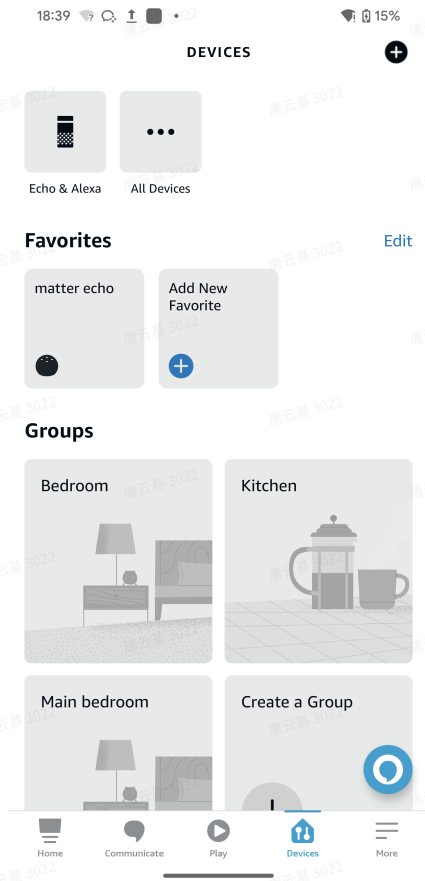



- Tap "Connect your ORVIBO Light Bulb", then "Next" and "Yes", to "Scan QR Code"

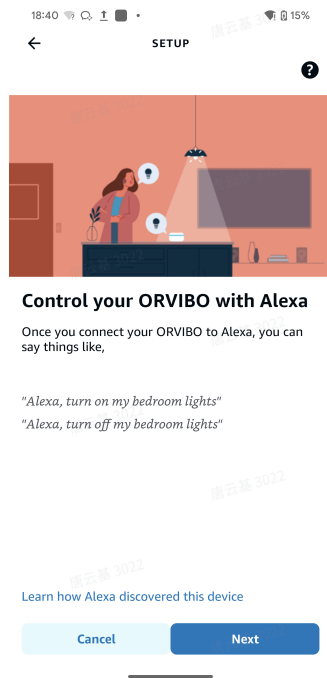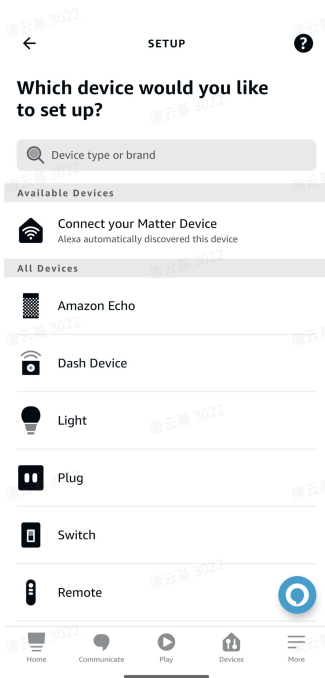




- Scan Matter QR Code on Orvibo Dimmer Switch or user manual.



- Select your network, tap "Next" and wait for it to connect and done.

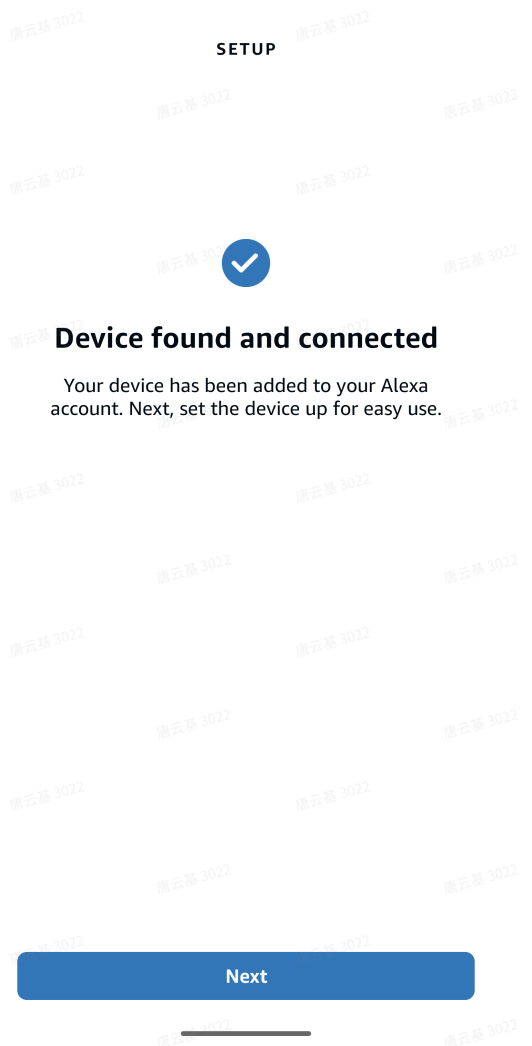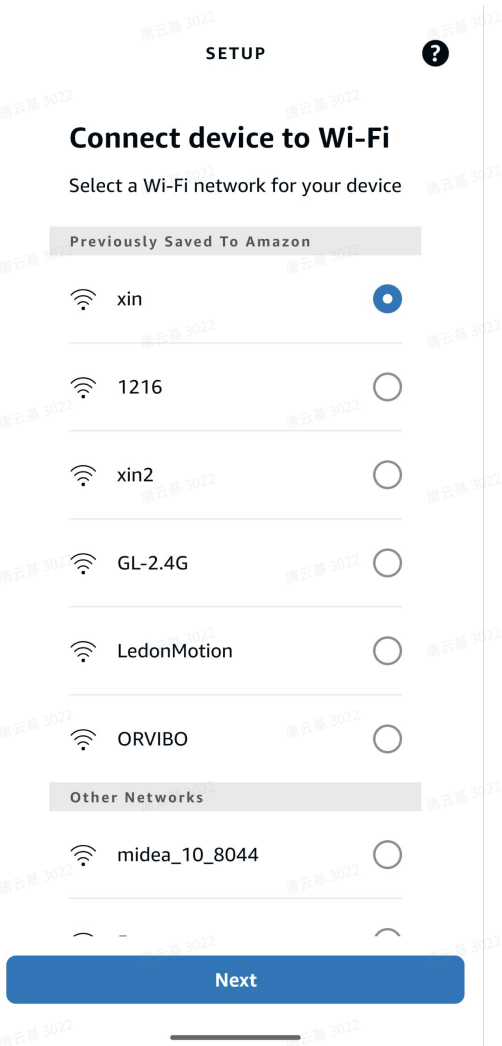


- Select your groups, tap "Add To Group" and done.

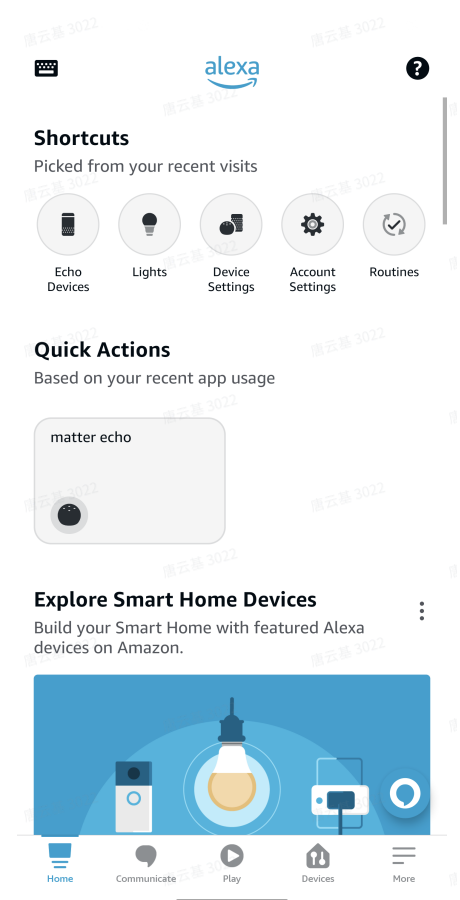
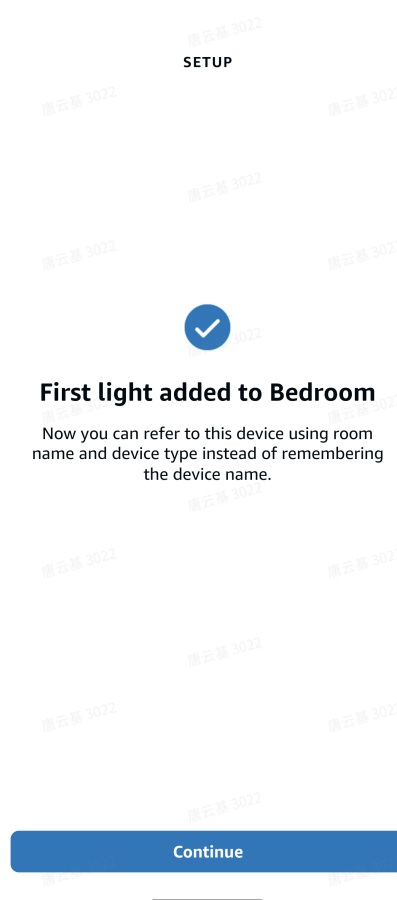
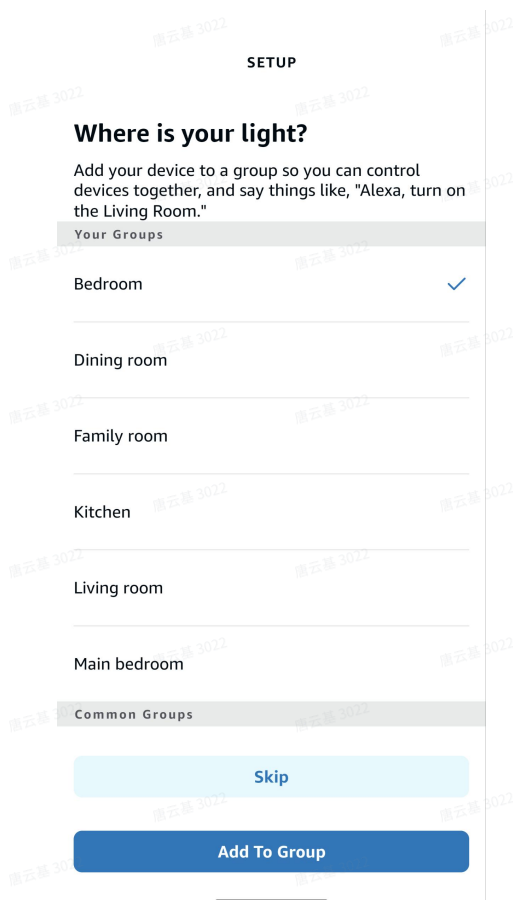


Using Apple Home App






- Open the Home app and tap "+", to "Add Accessory".

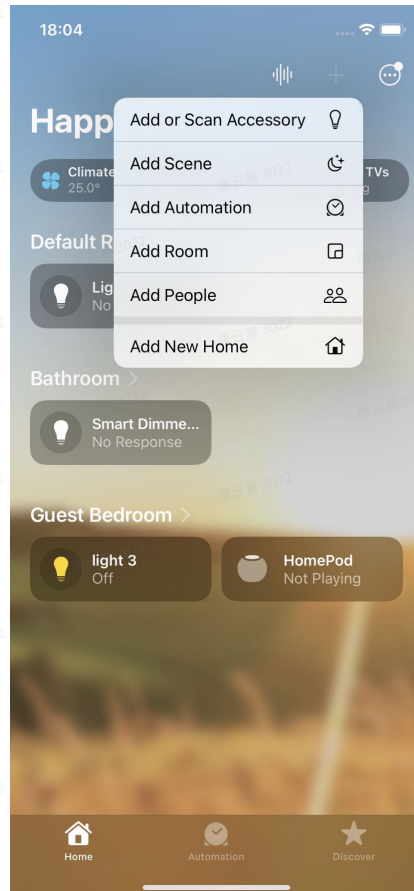

- Scan the Matter QR Code, then wait for the device to connect.

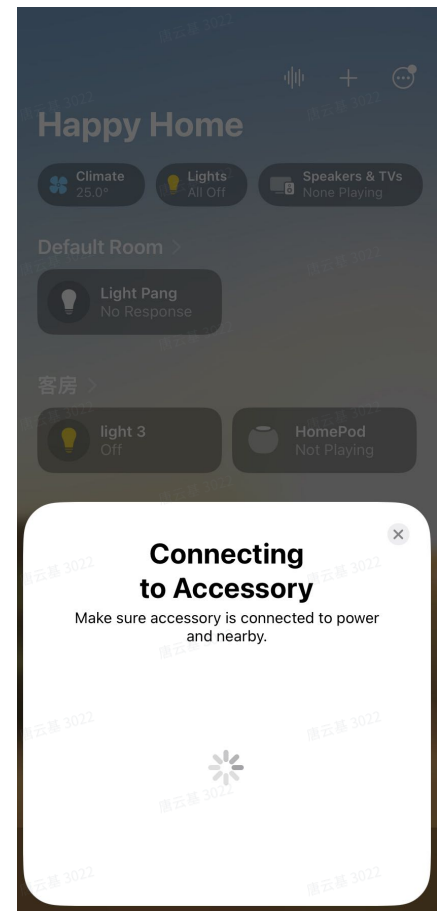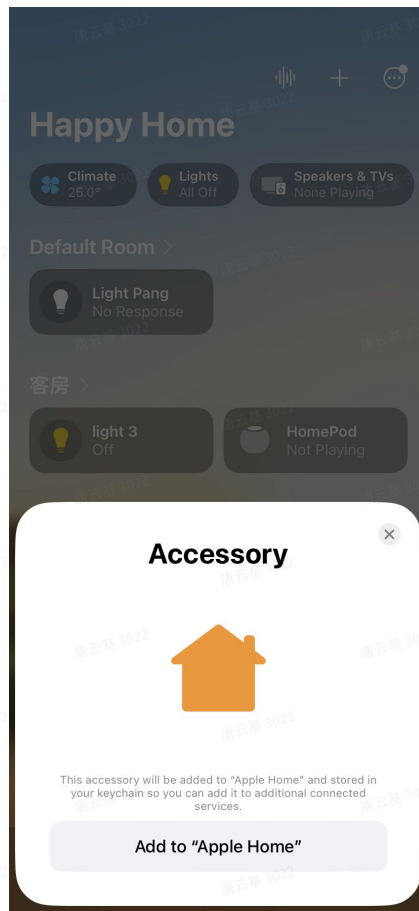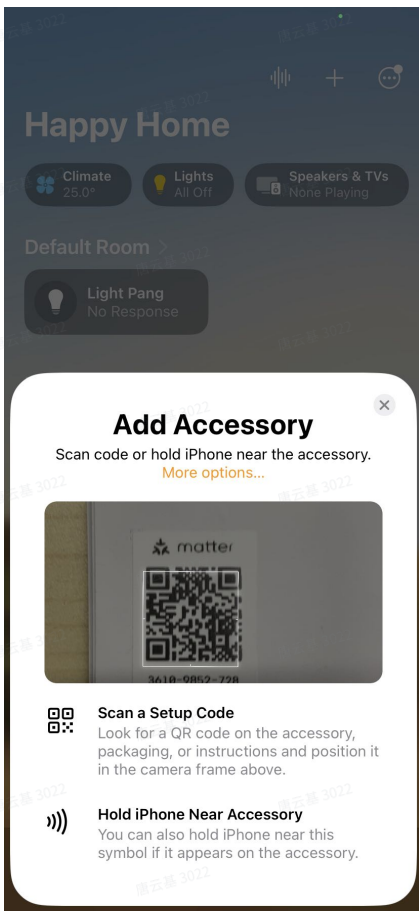

- Choose a location then tap "Continue", and then enter a name, tap "Continue". it's done.

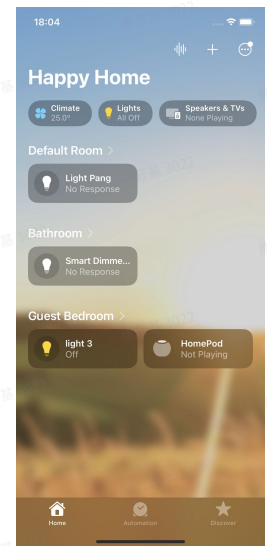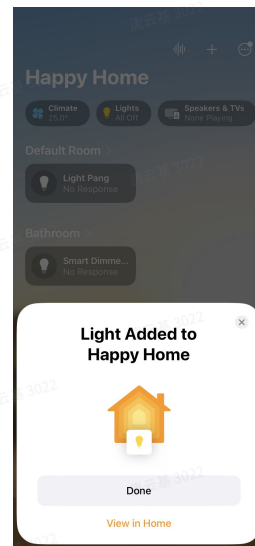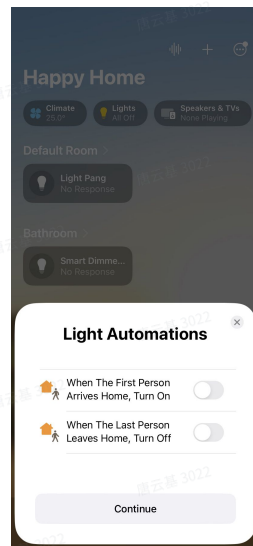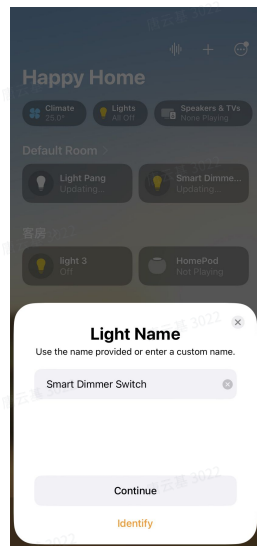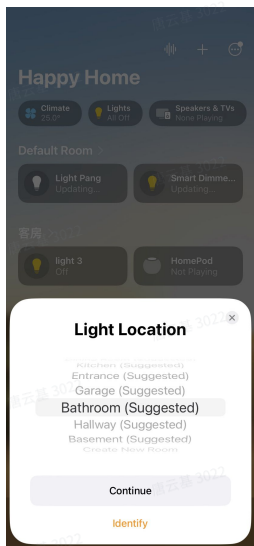

3. Add Orvibo Dimmer Switch to Orvibo Home App (Adding other third-party Matter products to the App is not supported for the time being) :

Please check the Orvibo Orvibo Dimmer Switch user manual.

(If the indicator light does not flash white, press the button 2 times quickly, then press the button again until the indicator flashes slowly.)