

How to Set Up MixPad D1 to join a 3rd Party Matter Controller

*更新列表:

5.30-更新最后一点, 加入Orvibo Home App的标题描述, 不支持第三方Matter设备。

How to Set Up MixPad D1 to join a 3rd Party Matter Controller

*This instruction is not for public or commercial purposes.




Note:

- The account must first add a HomePod, Google speaker or Alexa speaker that supports the Matter protocol. Check the FAQ for a specific list.
- MixPad D1 and the controller (normally it's the smart speakers of Alexa/Google/Apple) should be in the same LAN (local area network).
- The WiFi router should support or enable IPv6.
- After you've joined a Matter controller, then if you want to change the light bulb type from "Dimmable" to "Non-Dimmable", or on the contrary, you need to reset or delete MixPad D1 from the present Matter controller and rejoin to show the right UI of the light bulb on the App.

1. How to get the "Add to App" Matter QR code on MixPad D1?

- New/Resetted device: it will be shown in the new device set-up process, as below:

"Start"- "Select the type of light"- "Minimum brightness setting"- "Download and install Orvibo Home App"- "QR code for adding Matter/Orvibo App"

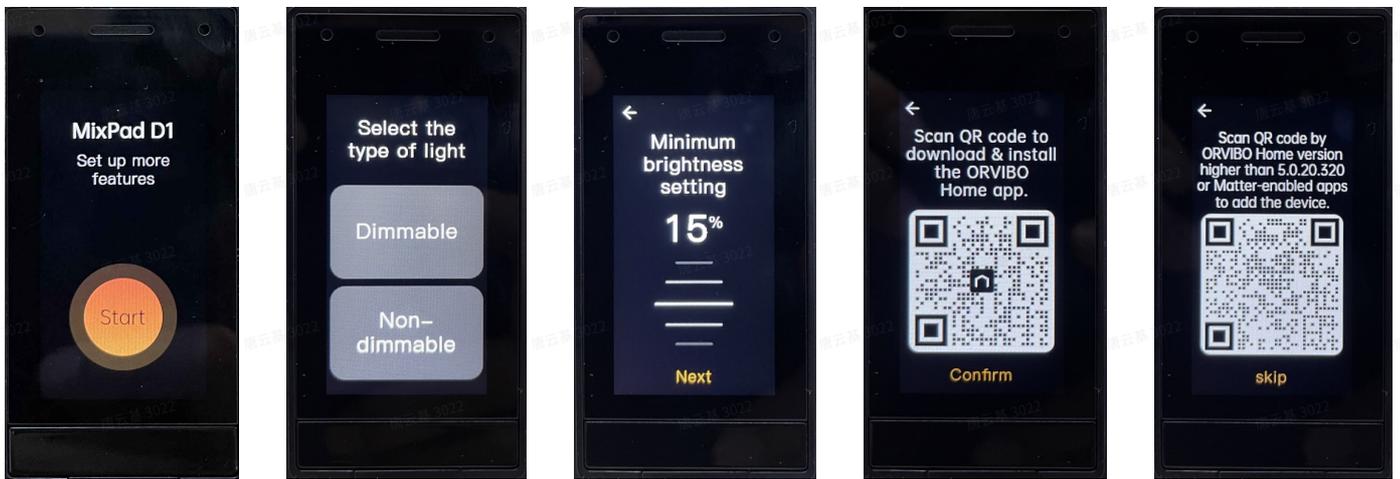

- Device skipped the set-up process, or joined Orvibo Home app: Go to "Setting" page of MixPad D1, then tap "Add to App".




2. Using Different Matter Supported App to Add MixPad D1

*Different App versions may differ slightly from the following interface and steps.

Using Google Home App

- Open the camera App of Android;

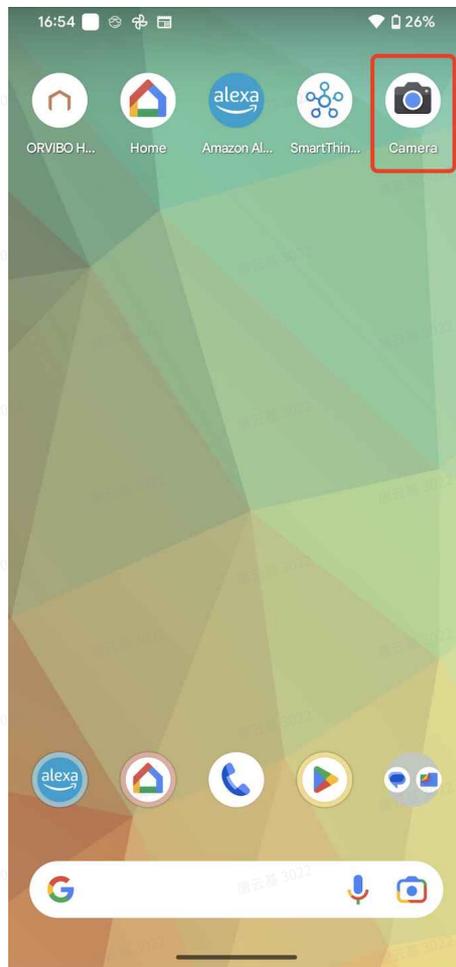

- Scan the Matter QR Code and tap "Continue", then "Add".



- Tap on Google Home in the App list.



Choose an app

You may need a Matter-enabled hub to control this device with the apps below. [What's a hub?](#)




Google Home

Set up and control your compatible Nest, Chromecast, and Google Home devices.


Installed

[Choose other app](#)

- Tap "I Agree" to add the product, then wait for the device to connect. Once added, tap "Done".


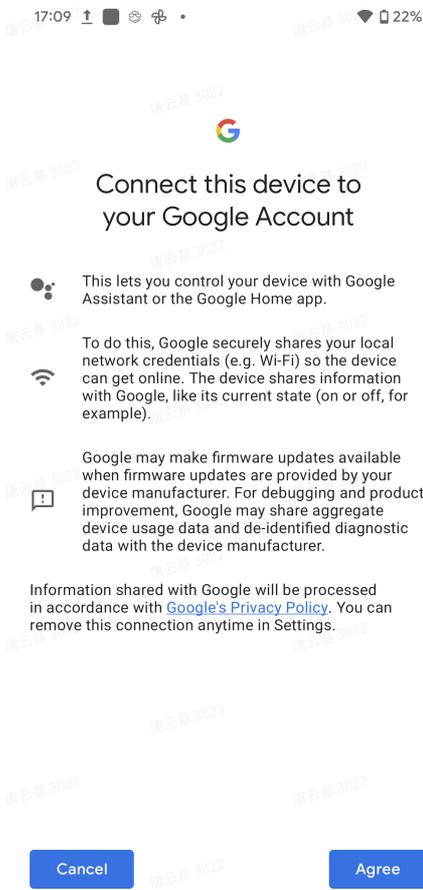


- Choose a location for the device then tap "Next". Then give the device a name and tap "Next".
- Your Matter-Enabled device has been added.

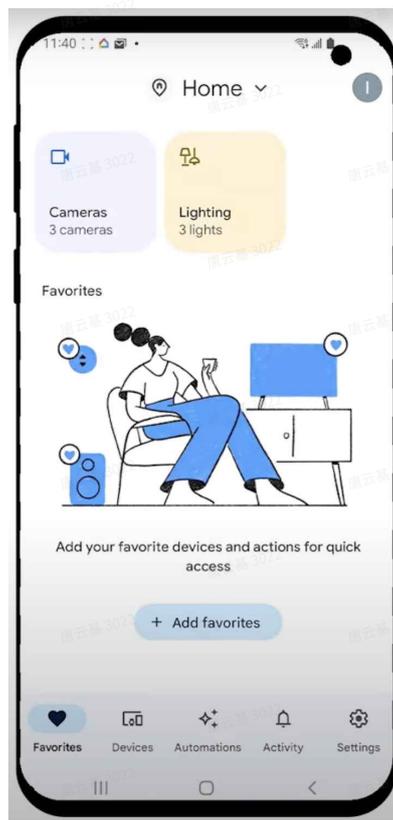


Using Alexa App.

- Open the Alexa App, and tap on "Devices", then "+" and "Add Device".

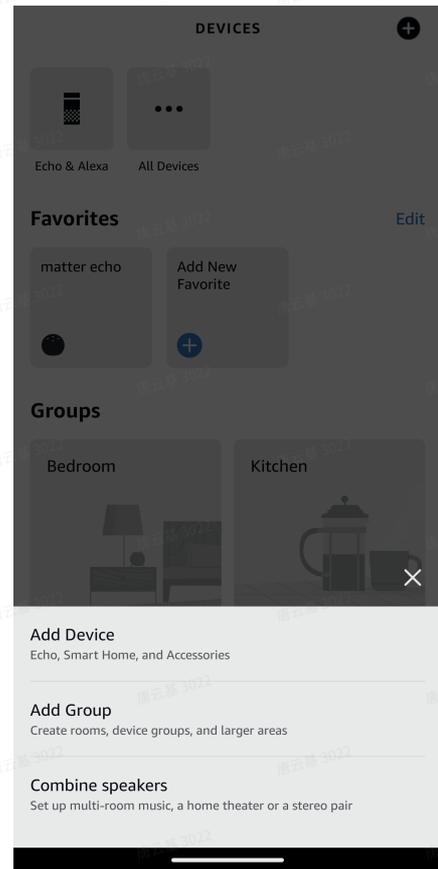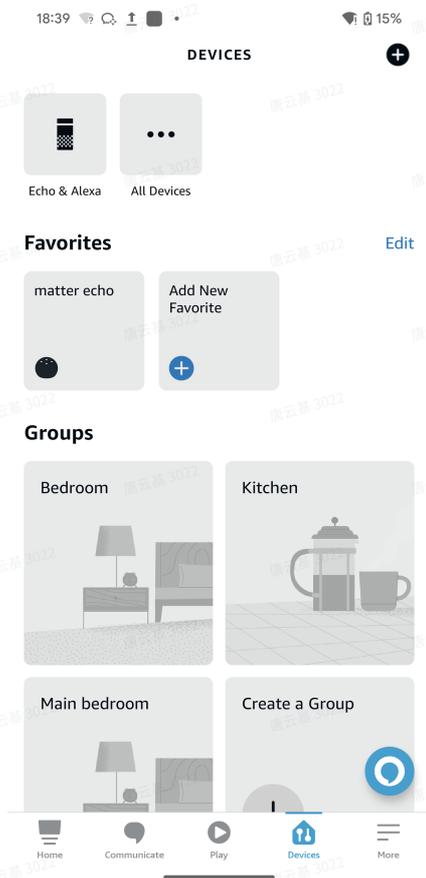


- Tap "Connect your ORVIBO Light Bulb", then "Next" and "Yes", to "Scan QR Code"

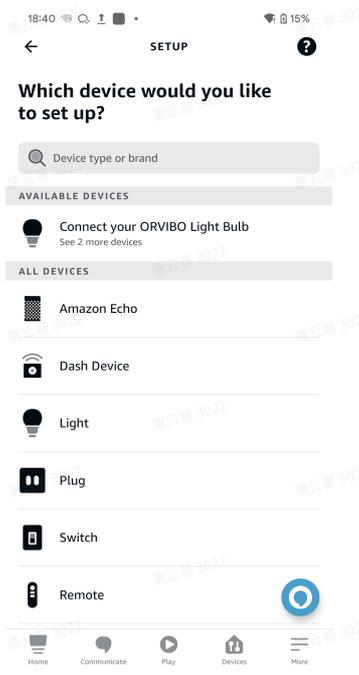



- Scan Matter QR Code on MixPad D1.



- Select your network, tap "Next" and wait for it to connect and done.

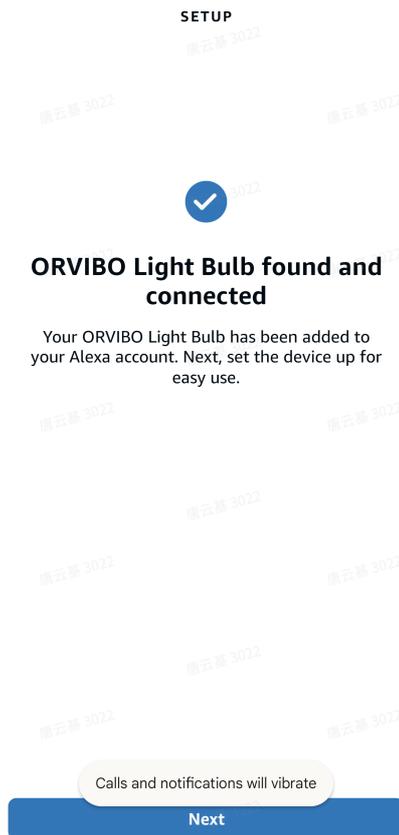


- Select your groups, tap "Add To Group" and done.

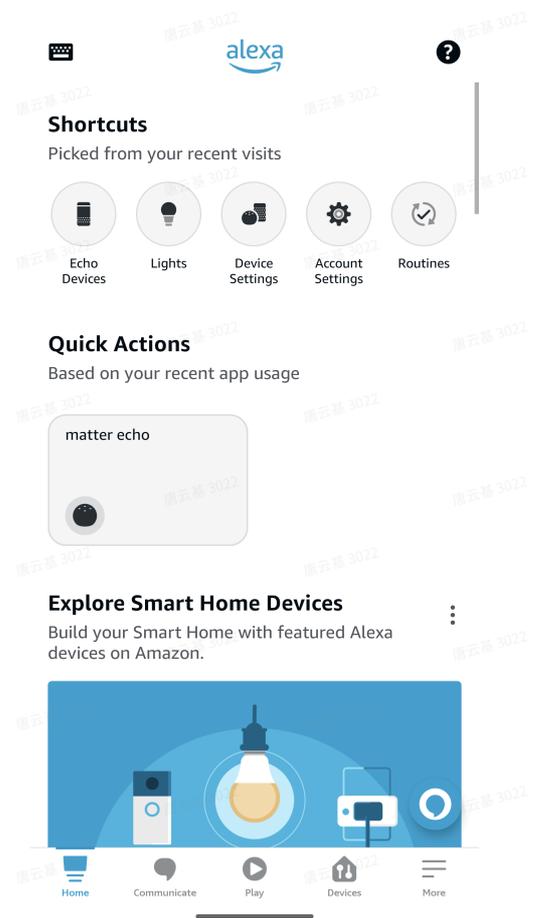
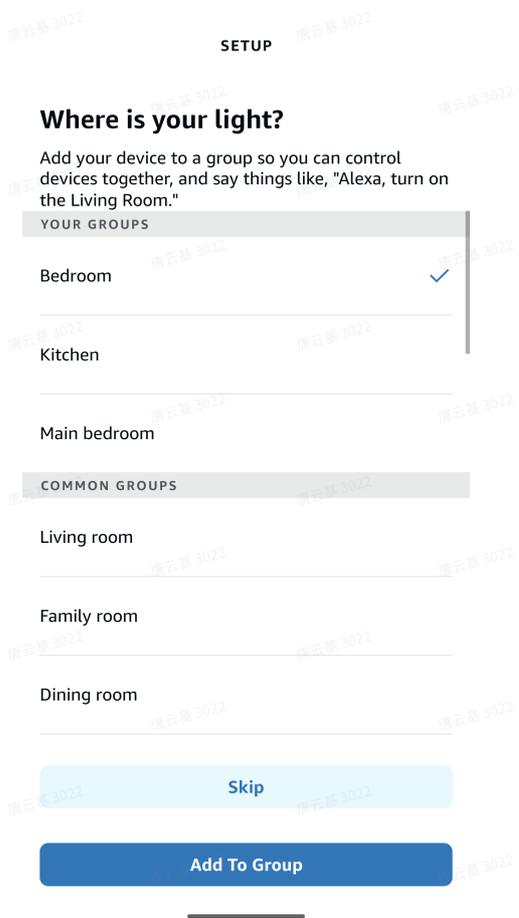


Using Apple Home App



- Open the Home app and tap "+", to "Add Accessory".

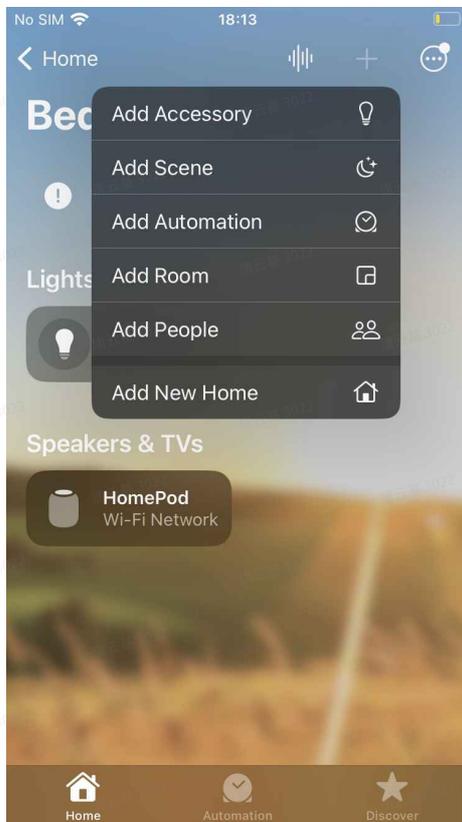

- Scan the Matter QR Code, then wait for the device to connect.

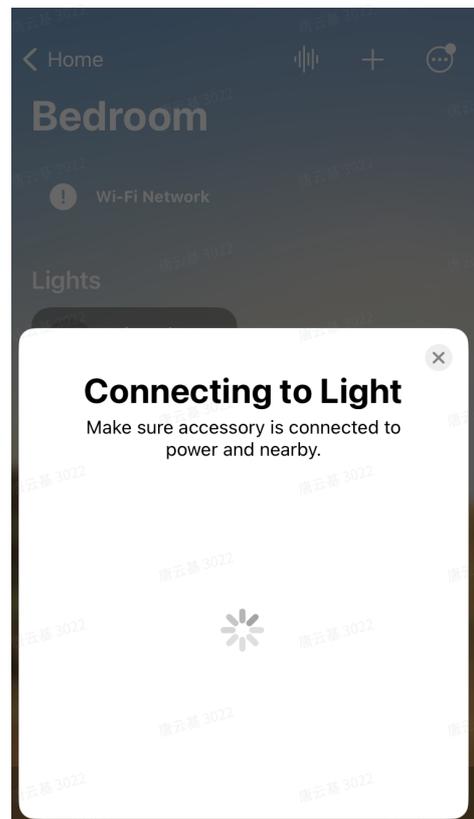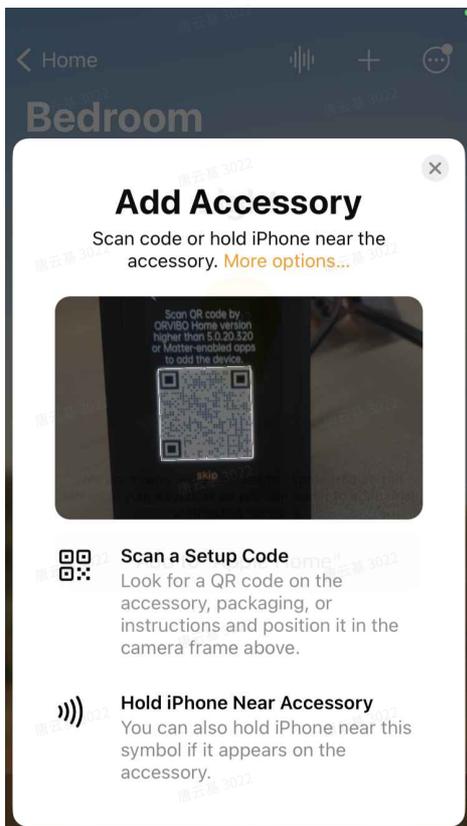

- Choose a location then tap "Continue", and then enter a name, tap "Continue". it's done.

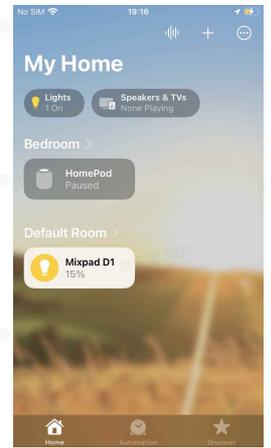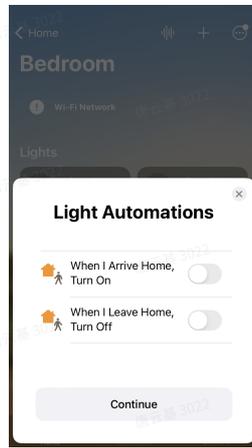

3. 3. Add MixPad D1 to Orvibo Home App (Adding other third-party Matter products to the App is not supported for the time being) :

Please check the Orvibo MixPad D1 user manual.